


REMOTE KEYPAD
GEN-KP

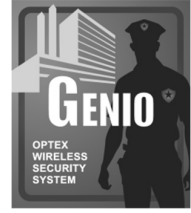

1 BEFORE INSTALLATION


<p>Warning</p> <p>Failure to follow the instructions provided and improper handling may cause death or serious injury.</p>	<p>Do not touch the unit base or power terminals of the product with a wet hand. (Also, if the product is wet after rain, do not touch it.) It may cause electric shock. </p>
	<p>Never attempt to disassemble or repair the product. It may cause fire or damage to the devices. </p>
	<p>[Handling of Batteries] Fire, explosion and severe burn hazard. Do not recharge, short circuit, crush, disassemble, heat above 100°C, Incinerate, or expose contents to water. Do not solder directly to the cell. </p>
<p>Caution</p> <p>Failure to follow the instructions provided and improper handling may cause injury and/or property damage.</p>	<p>Do not pour water over the product. The water may enter and may cause damage to the devices. </p>
	<p>Clean and check the product periodically for safe use. If any problem is found, do not attempt to use the product as it is and inform your installer. </p>
	<p>If you do not use the product for a long period of time, remove the battery. Keep it in a cool, dark area. </p>
	<p>Dispose batteries according to local regulations. </p>

This symbol indicates prohibition. The specific prohibited action is provided in and/or around the figure.

This symbol requires an action or gives an instruction.

The Repeater is designed to increase the effectiveness and versatility of the alarm system. It is a device that makes your system more powerful by increasing the maximum possible distance between the Main Unit (Control Panel) and the Devices

2 PARTS IDENTIFICATION

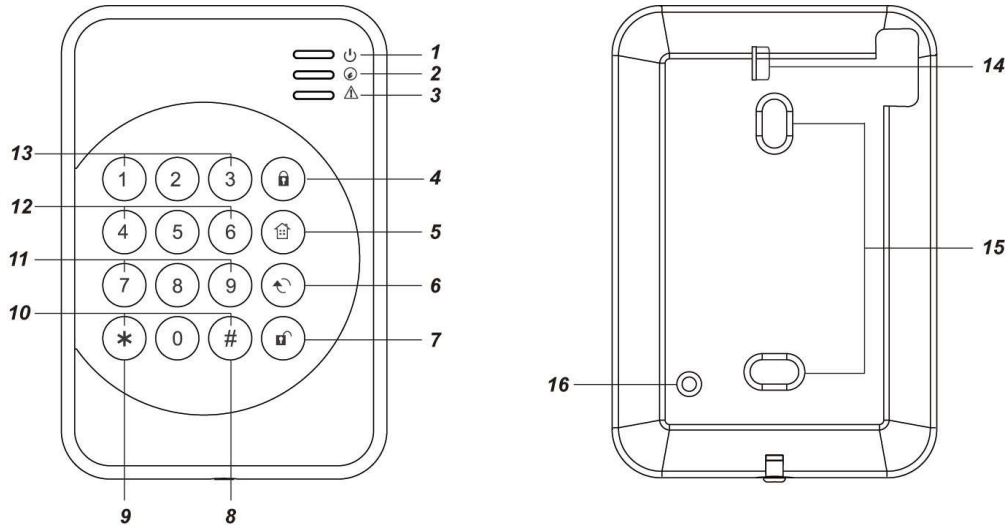

- 1. Active LED
- 2. Status LED
- 3. Fault Display LED

- 4. Arm Key
- 5. Home Key
- 6. Key
- Check Control Panel Status
- 7. Disarm Key
- to move back one step

- 8. # Key
- 9. * Key
Enter KP Pin Code + * Key to enter Test Mode
- 10. Send Learning Code
Press both # and * keys together to Send Learning Code
- 11. Medical Alarm (if enabled)
press both 7 and 9 to trigger medical alarm

- 12. Fire Alarm (if enabled)
press both 4 and 6 to trigger fire alarm
- 13. Panic Alarm (if enabled)
press both 1 and 3 to trigger panic alarm
- 14. Battery Insulator
- 15. Mounting Holes
- 16. Tamper Switch

NOTE>>

- A short beep will sound along with key pressing to indicate that the button pressed is valid.
- 4 continuous beeps will sound indicating mistake and the user should repeat the process again.

3 LED INDICATOR (BLUE / AMBER)

ACTIVE LED (BLUE / AMBER)

- Blue LED on 5 seconds: the system is in Normal Operation Mode.
- Blue LED flashes for 5 seconds: **low battery in Normal Operation Mode**.
- Amber LED on: the system is in **Test Mode**.
- Amber LED flash: **low battery in Test Mode**.

NOTE>>

- The keypad will enter sleep mode when idle and turn off all LEDs. After any key press, the Active Blue LED will turn on for 5 seconds indicating that Remote keypad is active.
- Active Blue LED will turn off after successful completion of a valid keystroke sequence, or when the pause in between keystrokes exceeds 5 seconds.
- When the Active Blue LED turns off before a valid keystroke sequence is completed, the previous entered keys are ignored.

STATUS LED (BLUE / RED)

- Red LED on: the system is in **Away Mode**
- Red LED flash: the system is in **Home Mode**.
- Blue LED on: activation of **Disarm Mode**.
- Blue LED flash: failure due to the following reasons:
 - No response sent by the control panel within 4 seconds.
 - Control Panel User PIN code was incorrect.
 - Request for **Home** mode during **Arm** mode.
 - Request for **Force arm**.

4 LED INDICATOR

- Flash: system failure (panel tamper, AC fault, sensor temper, sensor out of order, open door)
- On: Alarm Memory (depend on Control Panel).

5 POWER

- Remote keypad uses one EL123AP 3V Lithium battery as its power source.
- Remote keypad can also detect the battery status. If the battery voltage is low, the Active LED will flash (**Amber** in **Test mode** or **Blue** in **Normal mode**) during operation. The Low battery signal will be sent along with regular signal transmissions to the Control Panel for displaying the status accordingly.
- Before shipment, the battery is pre-installed by the factory.

6 POWER SAVING FEATURE

- When idle, Remote keypad is in **Stand-by** mode and uses no power. It will activate and **wake-up** for 5 seconds when any key is pressed.
- After 5 seconds of key inactivity, the power goes off and it returns to **Stand-by** mode.
- Upon completion of a command input, the power goes off and Remote keypad returns to **Stand-by** mode.

7 TEST MODE

- Remote keypad can be put into Test mode by entering the Keypad PIN code (default: **0000**) followed by * key. The Active Amber LED will turn on along with a long beep.
- To exit Test mode, press key **twice**, Remote keypad will sound a long beep and the Active LED will turn off, then Remote keypad returns to Normal Operation mode. Otherwise, Remote keypad will automatically exit Test mode after 5 minutes and return to Normal Operation mode.

NOTE>>

- The Test Mode is helpful for bypassing Remote keypad Tamper alarm when installing, replacing low batteries or removing to different mount site.
- When Remote keypad is in Test mode, it operates as **wake-up** condition and will NOT disconnect after 5 seconds.

TEST MODE FUNCTION

- Press * key and then 7 key — Transmit Remote keypad learn signal
- Press * key and then 2 key — Enable Dual-key Panic Alarm function
- Press * key and then 3 key — Enable Dual-key Fire Alarm function
- Press * key and then 4 key — Enable Dual-key Medical Alarm function
- Press * key and then 5 key — Disable all Dual Key function (**Default**)
- Press * key and then 6 key — Edit Keypad Pin Code
 - Enter **Old** Keypad Pin Code and then press key
 - Enter **New** a new 4-digit Keypad Pin Code and then press # key.
- Press key **twice** — to leave the Test Mode.
- Press * key and then 8 key — Enable Arm/ Home without PIN Code function
- Press * key and then 9 key — Enable Arm/ Home with Control Panel User PIN Code function (**Default**)

8 TAMPER PROTECTION

- The keypad is protected against any attempt to open the lid or to detach keypad from its mounting surface.
- Tamper protection is disabled when the keypad is in Test Mode.

9 INSTALLATION PROCEDURES

- Step 1. Put the Control panel into learning mode, .
- Step 2. Adding remote keypad into the Control Panel:

TEST MODE LEARNING

1. Put remote keypad in Test mode by entering KP PIN code (default: **0000**), then press * key. The Active Amber LED will turn on along with a long beep sound.
2. Press * key then 7 key. Remote keypad will sound a long beep.

NOTE>>

- If the remote keypad did not sound a long beep, it means the remote keypad did not send the learning code to the Control Panel, please press * key then 7 key again to send the learning code.

3. If the Control Panel receives the learning code, it will display the info accordingly. Refer to the operation manual of your Control Panel to complete the learn-in process.
4. After Control Panel receives the signal from remote keypad, it will send an acknowledgement back to remote keypad. The remote keypad will then beep 3 times to confirm the acknowledgement has been received.



DUAL-KEY LEARNING

1. Press and both # and * keys together under Normal Operation Mode. Remote Keypad will sound a long beep.

NOTE>>

- If the remote keypad did not sound a long beep, it means the remote keypad did not send the learning code to the Control Panel, please press both # and * keys together again to send the learning code.
2. If the Control Panel receives the learning code, it will display the info accordingly. Refer to the operation manual of your Control Panel to complete the learn-in process.
 3. After Control Panel receives the signal from remote keypad, it will send an acknowledgement back to remote keypad. The remote keypad will then beep 3 times to confirm the acknowledgement has been received.

NOTE>>

- If remote keypad does not perform 3 beeps, please restart the learning procedure.
- Step 3. After the Remote keypad is learnt-in, put the Control Panel into **Walk Test** mode, hold the Remote keypad in the desired location, and send the learning code to the Control Panel to confirm this location is within the signal range of the Control Panel. To send the learning code, either press the * key then 7 key under Test Mode or press both # and * keys together under Normal Operation Mode.
 - Step 4. When you are satisfied that the Remote keypad works in the chosen location, you can proceed with mounting the Remote keypad following the steps described below (see **Mounting Remote keypad**).
 - Step 5. Set your own the KP Pin Code
 1. When the keypad is under Test mode, press * key then 6 key, a long beep will be sound.
 2. Enter **0000** (default PIN code)
 3. Press  key, remote keypad sounds a long beep.
 4. Enter your new 4-digit code.
 5. Press # key, remote keypad sounds a long beep. The new PIN code is enabled.
 - Step 6. Press  key **twice** to leave Test mode and the installation is completed.

10 MOUNTING REMOTE KEYPAD

To mount the remote keypad




- Step1. Remove the front cover.
- Step2. Using the 2 mounting holes of the back cover as a template, mark off the positions in the most appropriate place.
- Step3. Insert the wall plugs if fixing into plaster or brick surface.
- Step4. Screw the Remote keypad onto the wall plugs.
- Step5. Replace the front cover.

11 HOW TO SET SYSTEM MODE

You may choose to arm/home arm with/without Control Panel User PIN Code.




ARM / HOME WITH PIN CODE

Under Test mode, Pressing * key and then 9 key to enable Arm/ Home with PIN Code function (**Default**).

- **Enter Arm Mode:** Enter any one of Control Panel user code and press  key. If panel has no fault and arming is successful, the Status Red LED will turn ON alone with a long beep.
- **Enter Home Mode:** Enter any one of Control Panel user code and  key. If panel has no fault and arming is successful, the Status Red LED will flash 4 times alone with 3 beeps.
- **Return to Disarm Mode:** Enter any one of Control Panel user code and  key. If disarm is successful, the Status Blue LED will turn ON along with 2 beeps.

ARM / HOME WITHOUT PIN CODE

In the Test mode, Pressing * key and then 8 key to enable Arm/ Home without PIN Code function

- **Enter Arm Mode:** Press  key. If panel has no fault and arming is successful, the Status Red LED will turn ON alone with one long beep.
- **Enter Home Mode:** Press  key. If panel has no fault and arming is successful, the Status Red LED will flash 4 times alone with 3 beeps.
- **Return to Disarm Mode:** Enter any one of Control Panel user code and  Key. If disarm is successful, the Status Blue LED will turn ON along with 2 beeps.


12 DUAL-KEY ALARM FUNCTION

- Panic Alarm — Press both 1 and 3 keys to trigger Panic alarm.
- Fire Alarm — Press both 4 and 6 keys to trigger Fire alarm.
- Medical Alarm — Press both 7 and 9 keys to trigger Medical alarm.

NOTE>>

- The dual-key alarm function is disabled by default. To enable it, please refer to the **Test Mode** section.

13 GENERAL OPERATION

- If there is **Alarm Memory**, the Status Blue LED and fault LED will turn ON with 5 beeps (depending on Control Panel).
- Enter Test mode — Enter **Keypad PIN code** and then press * key.
- Panic Alarm — Press 1 key + 3 key at the same time. (if the function is enabled)
- Fire Alarm — Press 4 key + 6 key at the same time. (if the function is enabled)
- Medical Alarm — Press 7 key + 9 key at the same time. (if the function is enabled)
- Check Control Panel Status — Normal Mode Press  key.
 - Red LED on: the system is in **Away Mode**
 - Red LED flash: the system is in **Home Mode**.
 - Blue LED on: activation of **Disarm Mode**.
 - Blue flash: failure due to the following reasons:
 - No response sent by the control panel within 4 seconds.

- PIN code was incorrect.
- Request for **Home** mode during **Arm** mode.
- Request for **Force arm**.

14 CHANGE OF BATTERY

- Step1. Put the Control Panel to programming menu for by pass the KP tamper alarm.
- Step2. Dismount the Remote keypad.
- Step3. Take out the old battery and press any key to discharge before replacing the new battery in the battery compartment, with unmarked (negative) side of battery facing down.
- Step4. Close the case using the rear fixing screws.
- Step5. Screw back the Remote keypad to the surface with mounting screws.
- Step6. Put the Control Panel back to normal operation mode.

15 FAULT CONDITONS

When Remote Keypad is under **NORMAL OPERATION MODE**,

- Step1. When fault condition exists within Control Panel, if the Keypad is used to arm the panel, the keypad Status Blue and Fault Amber LED will flash 4 times along with 3 beeps to indicate fault condition.
User can force arm the Control Panel by performing the arm action again.
- Step2. When the Keypad is used to disarm the panel, the Active **Blue** LED will turn ON alone with two short beeps indicating normal operation. At a fault situation, it will emit 5 times and turn on both Status Blue and Fault Amber LED for 5 seconds.
- Step3. If the **Control Panel** is under Arm Mode, you **CANNOT** activate Home mode with Remote keypad. The Status Blue LED will flash 4 times to indicate transmission error.
- Step4. If you input incorrect KP Pin code for 4 times, KP will disable the key function for 1 minute, indicating by all LEDs flashing 3 times and 6 beeps. After 1 minute, KP will emit a long beep to indicate that the key function is back to normal.

16 APPENDIX

If you have forgotten the Pin Code or anything wrong happened in the Remote keypad, you can reset the Remote keypad to factory default and reinitialize it.

Reset to factory default

- Step1. Remove the batteries and release the tamper.
- Step2. Press & hold **3** key while inserting the battery back.
- Step3. Continue pressing **3** until three short beeps to indicate successful reset.
- Step4. Release **3** key, the reset process is complete.

NOTE>>

- After reset, PIN code reverts to factory default values, **0000**. Remote keypad will need a new learn-in process to start functioning.

17 SPECIFICATIONS

Model	LEN-KP
Frequency	433.82 MHz
Power source	3V CR123A Lithium battery: 1 units
Battery life	Approx. 10 years (4 activations per day, 25°C)
Operating conditions	-10°C to +50°C (up to 85% non-condensing)
Weight	125 g (including battery)

18 DIMENSIONS

